

Pump Temporary Accommodation Wastewater Directly to a Mains Sewer or to Larger Storage Tanks

- O Minimise or eliminate waste tanker visits on your sites
- O Plug & Play No commissioning required
- O Portable, Powerful & Tough





1. Connect the incoming waste pipe to pre-installed 4"/100mm connection point



3. Plug in to 240V power supply from the cabins and turn on!



2. Connect the foul water pumping main to the supplied outlet

| CABINPUMP Model | Ultra |
|-----------------------------|------------------------|
| Number of WC's | 20 |
| Number of People | 150 |
| Dimensions (L x H x D) | 1,000 x 900 x 600 (mm) |
| Weight | 120kg |
| Max Pumping Distance | 605m |
| Max Pumping Height | 12m |
| Fork/Strap Lifting Pockets | Yes |
| Pumping Main Required (OD)* | 63mm |

| Pump Type | Macerator |
|-------------------------|-------------------|
| Power Supply | 230V |
| Power Rating | 1.1kW |
| Rated Current | 4.97 A |
| Starting Current | 24.85 A |
| Thermal Pump Protection | Included |
| Power Connection | 16A Commando Plug |

^{*}Rising main preferred specification SDR17 Black